

WALL MOUNTED INSTALLATION


1. Make sure wall is clean and flat.



2. Make sure you have all the tools required for the job.



3. Measure position of panel.

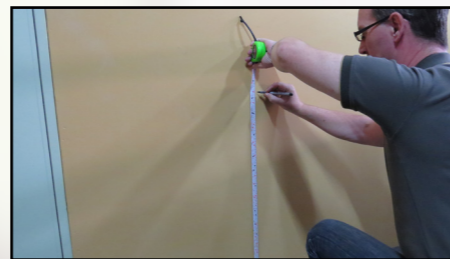

4. Using the template line up the position and using low tech adhesive fix in place.



5. Secure all corners making sure the template is flat to the wall.



6. Mark the pre-determined holes onto the wall.



7. Remove tape carefully as to not damage the decor and then mark directly onto wall for drilling.



8. Using the plastic plugs provided drill out the holes.



9. Fix plastic plugs and screw in 4.2mm counter sunk screw.



10. Leave 6mm of screw head protruding.



11. Note position of fixing rebates on the back of the panel.



12. Position fixing rebates in middle of wall and push back into position, pulling down gently to lock in place.



CEILING MOUNTED INSTALLATION

1. Make sure ceiling is clean and flat.



2. Make sure you have all the tools required for the job.



3. Measure position of panel.




7. Remove tape carefully as to not damage the decor and then mark directly onto ceiling for drilling.




8. Drill holes with a No8 drill bit and then use plastic plugs provided for concrete or plaster board.




9. Screw rails in place using screws provided making sure that the rails are fitted the correct way.

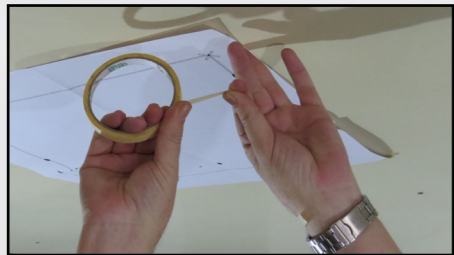


4. Using the template line up the position and using low tech adhesive fix in place.

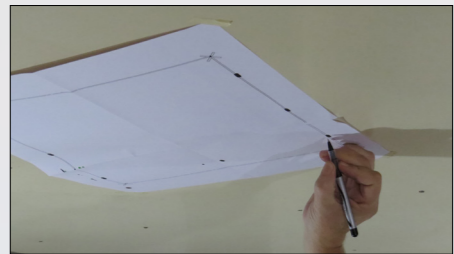

5. Secure all corners making sure the template is flat to the ceiling.

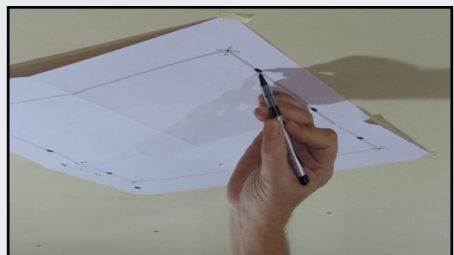

6. Mark the pre-determined holes onto ceiling.

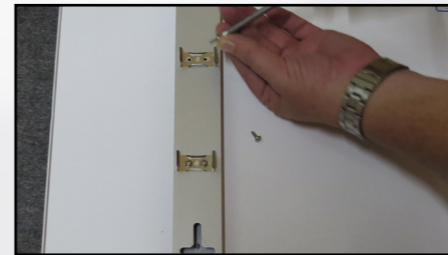

10. Screw clips onto the back of the panel making sure that they are secure.



11. Carefully lift the panel towards the rails making sure they're in line.



12. Gentle push the panel towards the ceiling and make sure it is securely fixed.